




# Re-Use-It Installation Instructions

- 1) Make sure existing surface is smooth, dry, and clean
- 2) Re-Use-It is applied perpendicular to the floor surface. If your floor runs north-south the Re-Use-It will run east-west.
- 3) Re-Use-It covers the entire floor surface
- 4) As you roll out Re-Use-It, you expose the adhesive on the bottom which will stick to your subfloor.
- 5) As one person slowly walks backwards unrolling Re-Use-It another person secures the adhesive to the subfloor by smoothing it out with a stiff bristle push broom or roller. See Ill A.
- 6) When you reach a wall cut Re-Use-It with a utility knife and start next run. It is good to line up seams as close as possible, however slight overlaps or gaps are ok. See Ill 1.
- 7) Roll out top flooring perpendicular to the Re-Use-It, make all rough cuts along wall perimeter, and let acclimate for at least 24 hours. If floor edges are damaged or deformed, seam areas may be overlapped by up to 1 inch and double cut to realize two fresh edges\*. (Do not make double cuts until step 12.) See Ill 2.

\*Overlap and down cutting will reduce coverage of material in the floor width. Please make sure that there is enough material to complete the job.

NOTE: Do not overlap seams if doing so will compromise floor fit!

NOTE: Do not use Re-Use-It to install Timestep T Black. Use double faced tape and top tape.

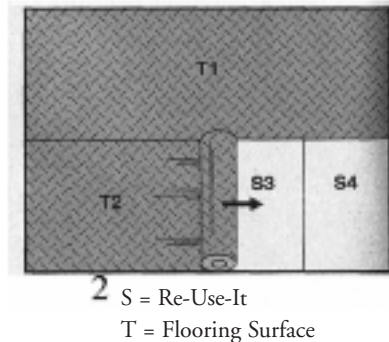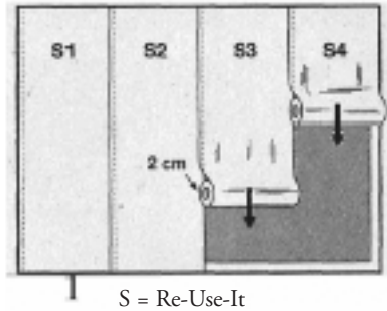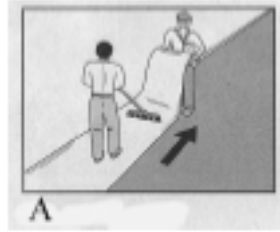


- 8) Roll Flooring up half way using flooring tubes provided. Do this one section at a time. Peel off protective layer on Re-Use-It exposing the top adhesive. See Ill 3,4,5.
- 9) Gently roll flooring back into adhesive making sure not to shift or change alignment of the flooring. Smooth out flooring from the center to the edges.
- 10) Repeat procedure on each half of the remaining sheets of flooring. Do not cut any seams at this time.
- 11) Once all flooring has been affixed to the Re-Use-It roll each sheet one at a time from the center to the edges with a 75 to 100 pound floor roller. See Ill 6. (Floor Rollers may be ordered at [www.stagestep.com](http://www.stagestep.com) or [www.aesonflooring.com](http://www.aesonflooring.com).) See product list on page 24.
- 12) Once entire floor surface has been rolled, double cut or scribe all seams. Be careful not to cut the Re-Use-It during this procedure. Cutting Re-Use-It at seam areas will weaken its ability to properly hold the seams closed. Once all seams have been cut, roll seam area with 75 to 100 pound roller.


### TIPS:

- 1) Room should be warm and dry. Re-Use-It should not be used in damp areas or outside.
- 2) If a mistake is made and the floor gets tangled or misaligned, gently pull floor material up and try again. If Re-Use-It gets dirty, damaged or wet, cut damaged area out and lay in replacement piece.
- 3) Test Re-Use-It to confirm it will stick to your subfloor prior to installation.


**CAUTION:** Extreme heat can damage Re-Use-It resulting in its failure to bond flooring to subfloor. Call Stagestep/Aeson if this is likely to happen or is happening. There is a special 4" seam tape available to fix this.

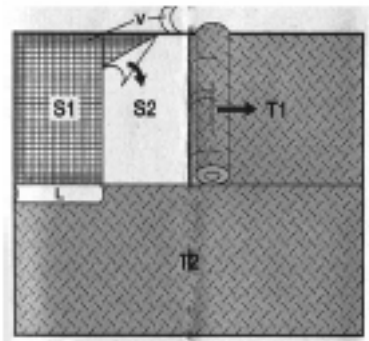


3 S = Re-Use-It  
T = Flooring Surface

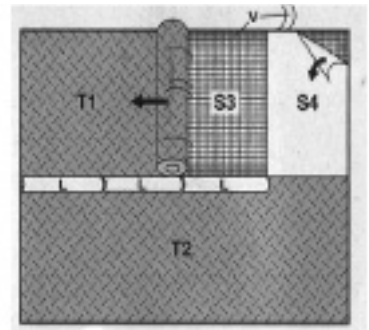

4 S = Re-Use-It  
T = Flooring Surface

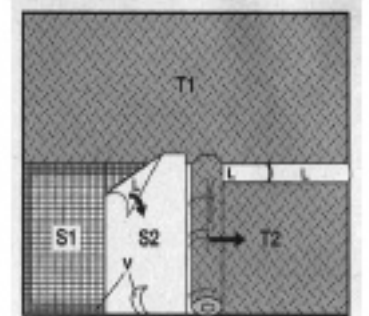

5 S = Re-Use-It  
T = Flooring Surface

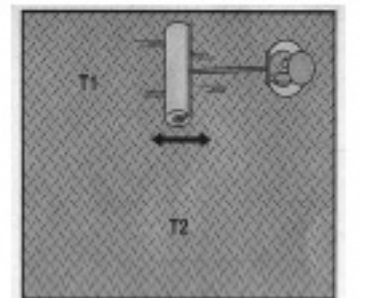

6 T = Flooring Surface